

## How to Use Your Seat Belt System

### Latching the 3-Point Seat Belt

- Adjust the seat to its proper driving position.
- Hold the latch and pull the seat belt across the body without twisting the webbing.
- Vertically insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure the belt is securely fastened.
- Snug the seat belt across the hips, on top of the thighs. The shoulder belt should be centered and lying flat across the chest - between your neck and the edge of your shoulder.

### Using the Seat Belt Height Adjuster

If the truck is equipped with a seat belt height adjuster, it can make the ride more comfortable by helping the driver properly position the height of the seat belt - so it doesn't rub against the face or neck.

- Adjust the seat to its proper driving position.
- Latch your seat belt.
- Pinch the height adjuster's top and bottom levers together to move the shoulder loop to a comfortable height. The shoulder belt should be centered and lying flat across the chest - between your neck and the edge of your shoulder.
- Move the shoulder loop until it clicks into a locked position.

### Unlatching the Seat Belt

- Push the button at the end of the buckle to release the latch.
- If the Komfort Latch or Sliding Komfort Latch is in use, disengage it. Always disengage the Komfort Latch or Sliding Komfort Latch when removing the seat belt. This will allow the seat belt to fully retract.
- Allow webbing to retract to be stored until the next use.

### How to use center position seat belt

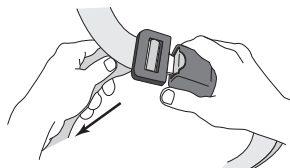


Fig. 18

#### To lengthen seat belt

Turn the adjustable latch at a right angle to the webbing and pull away from the latch, using the lower webbing strap.

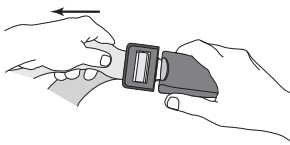


Fig. 19

#### To shorten seat belt

Pull the top webbing strap directly away from the adjustable latch.

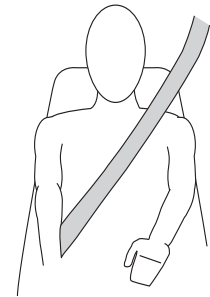


Fig. 20

#### To release seat belt

Depress button with thumb or finger. Latch will eject from buckle.

## Proper Seat Belt Fit



**Proper location of shoulder belt.** Belt must be centered and lying flat across the chest, between neck and edge of shoulder.



### Wrong

Shoulder belt must not rub against face or neck. Move Seat Belt Height Adjuster down to adjust.



### Wrong

Shoulder belt must not hang off shoulder. Move Seat Belt Height Adjuster up to adjust.

Fig. 17